

Step 1: Remove Nozzle from Handle



1. REMOVE BATTERY

Remove the battery from the unit.

2. INSERT NOZZLE WRENCH

Insert the nozzle wrench into the front of the unit.

3. ROTATE WRENCH

Rotate wrench until the tabs on the nozzle line up with the slots in the wrench.

4. LINE UP

When the tabs and slots are lined up the wrench will be completely inserted into the front of the sprayer.

5. TO REMOVE

To remove, rotate the wrench in the counter clockwise direction until the nozzle comes loose (1/4 rotation).

6. TILT SPRAYER

Rotate wrench until the tabs on the nozzle line up with the slots in the wrench.

Step 2: Insert Nozzle into Extension Wand



1. INSERT NOZZLE

Insert the nozzle into the wrench, lining up the tabs on the nozzle and the slots on the wrench.

2. INSERT WRENCH

Insert the wrench with nozzle into the front end of the extension wand.

3. ROTATE WRENCH

Push in and rotate the wrench ¼ turn counter clockwise. When you hear a click the nozzle is in position. Remove the wrench when complete.

Step 3: Insert Extension Wand into handle



1. INSERT EXTENSION WAND

Insert the extension wand into the handle, turning counter clockwise until extension wand snaps into place. lining up the tabs on the nozzle and the slots on the wrench.

To Remove Extension Wand

Turn extension wand ¼ turn counter clockwise and remove from handle.