
18" scrubber Pigtail cord (8014058) replacement guide

Tools Required:


- 1. Wire strippers
- 2. Wire connection crimpers
- 3. Philips head screwdriver or drill
- 4. Crescent wrench

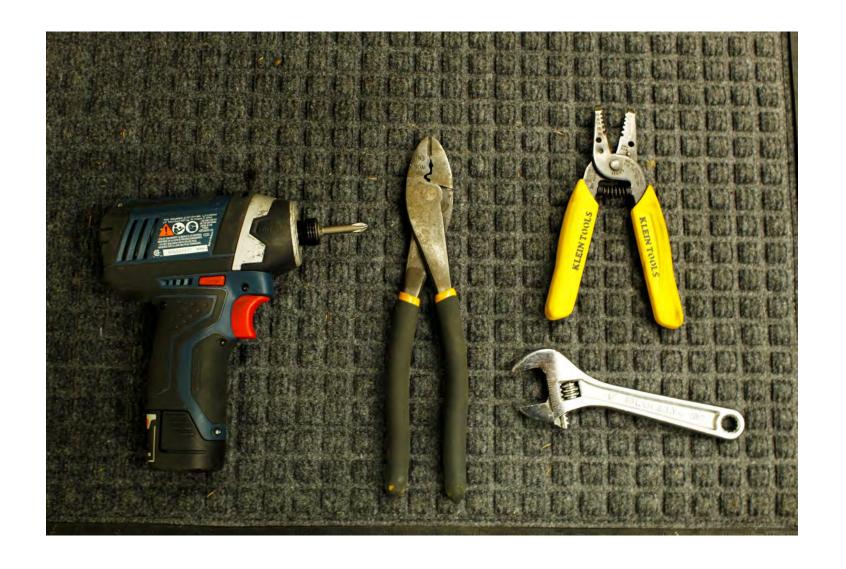


1. Remove the 4 Philips head screws from the front panel.




1. Locate the White, Green, and Black wires shown in the picture.

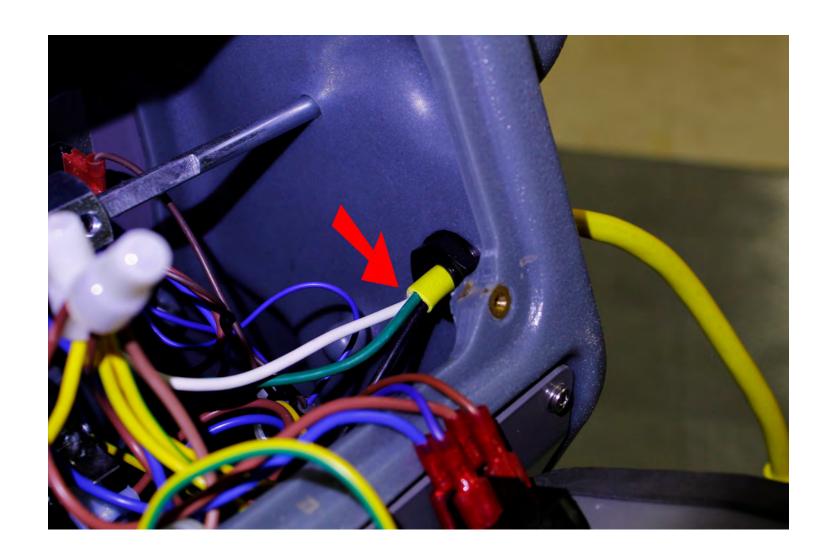


1. Cut the white and green wire as shown in the picture.

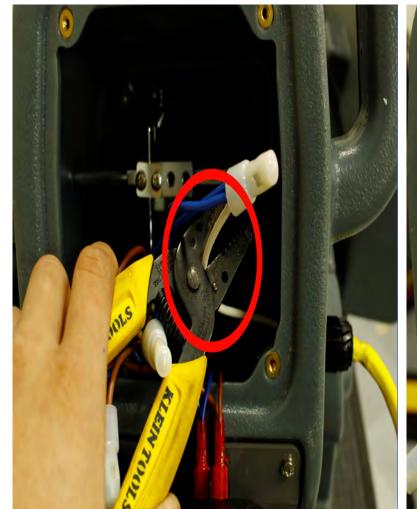


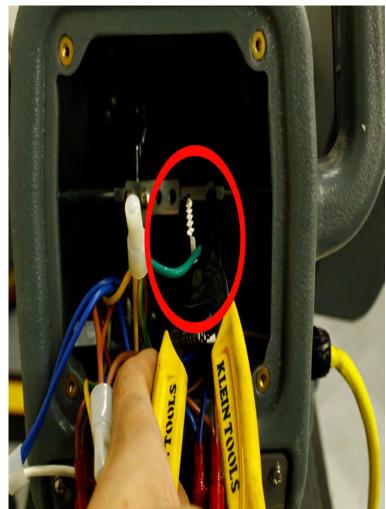


1. Strip the green and white wire with the wire strippers

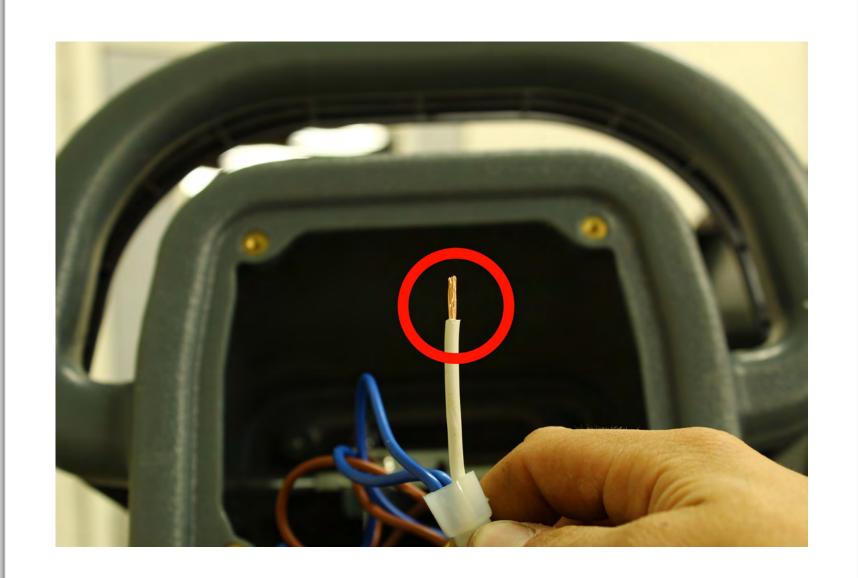


1. Install a new supplied connector on both the white and green wire

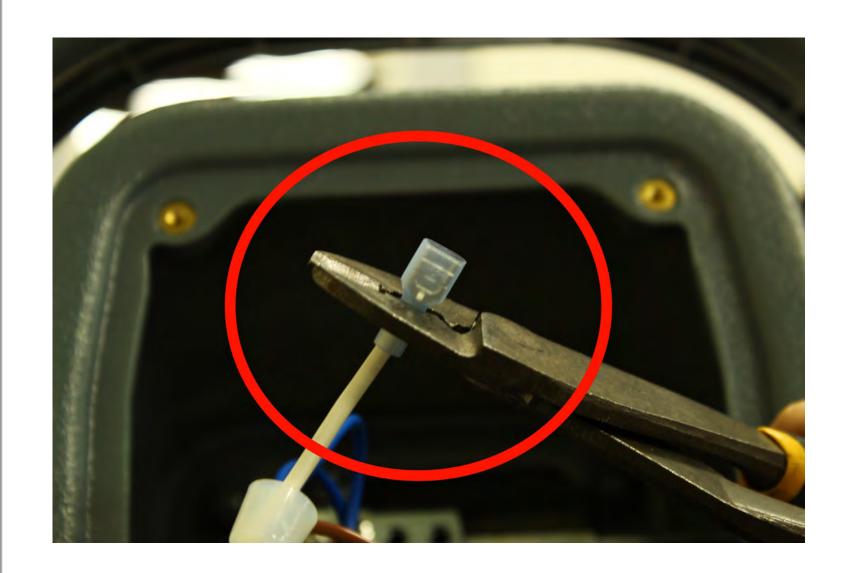


1. Locate the backpanel and remove the7 Philips head screws

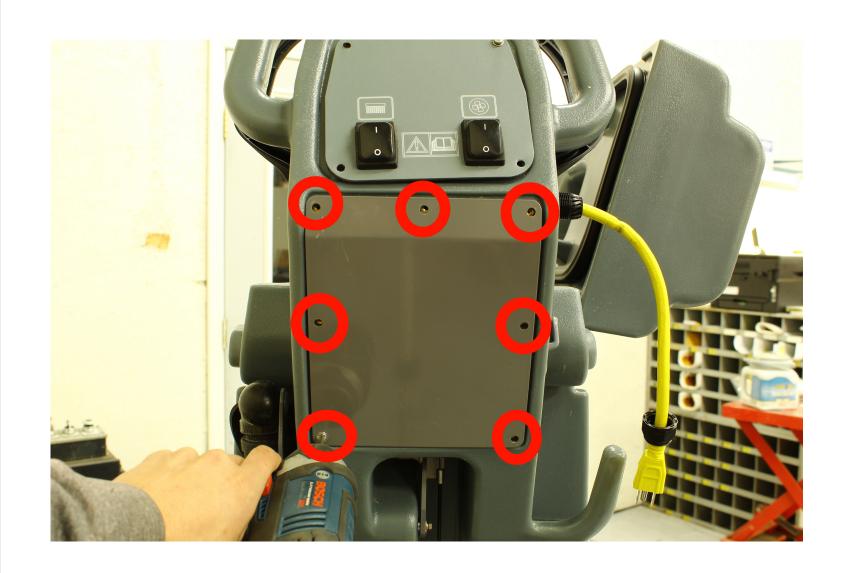


1. Locate the black wire coming from the Pigtail and remove it from the circuit breaker

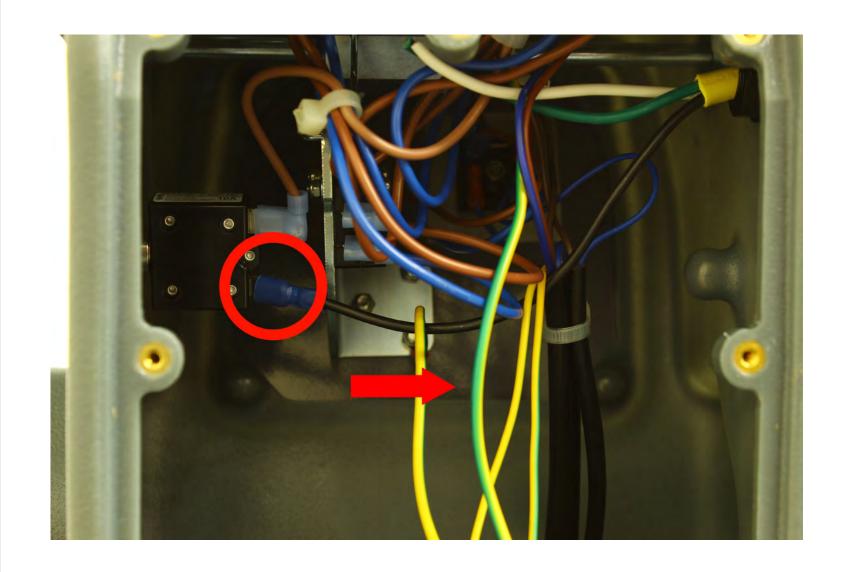


1. Pull the old Pigtail out and discard

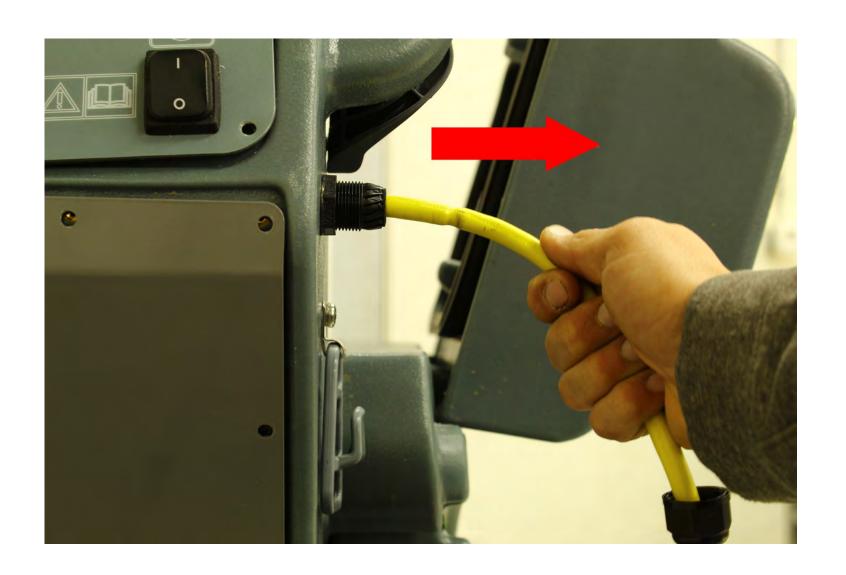

1. Remove the old strain relief, using a crescent wrench

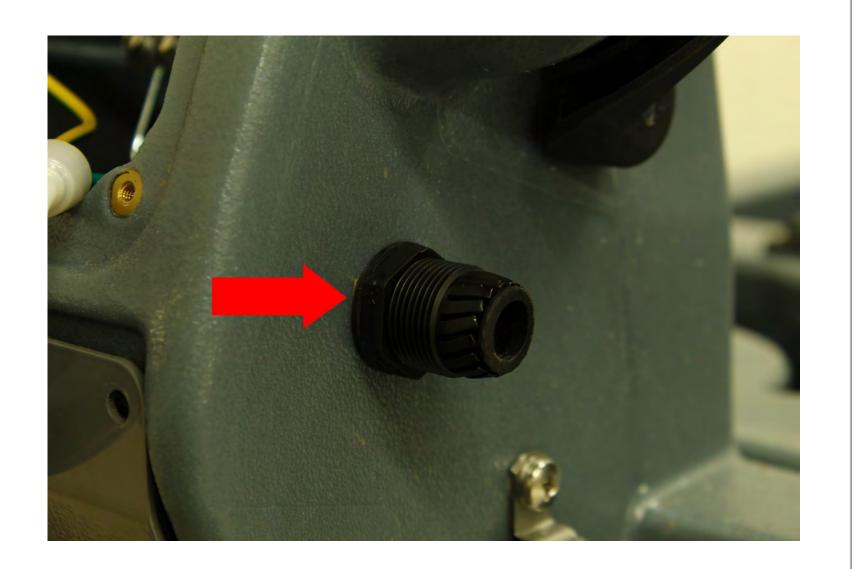


1. Remove the old strain relief, using a crescent wrench

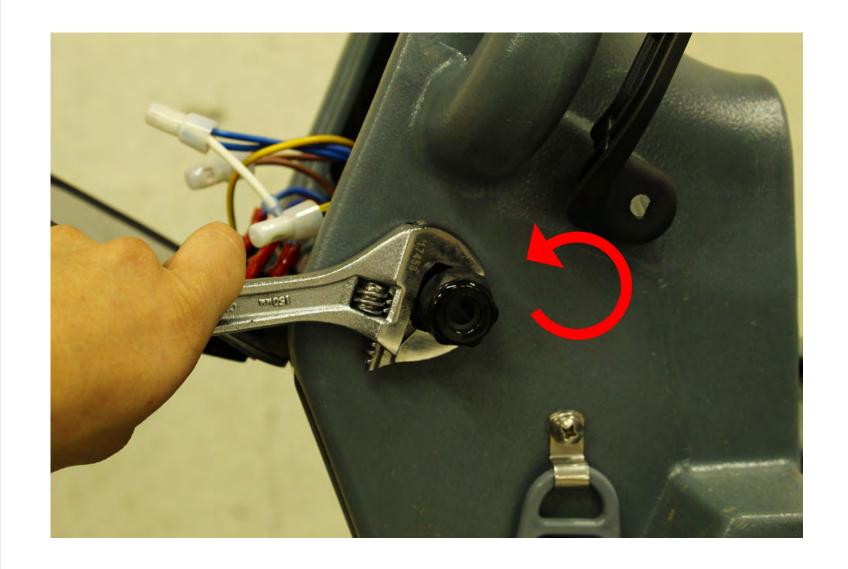


1. Insert the new strain relief and tighten




1. After installing the new strain relief, install the new Pigtail, then tighten the strain relief until snug DO NOT OVERTIGHTEN

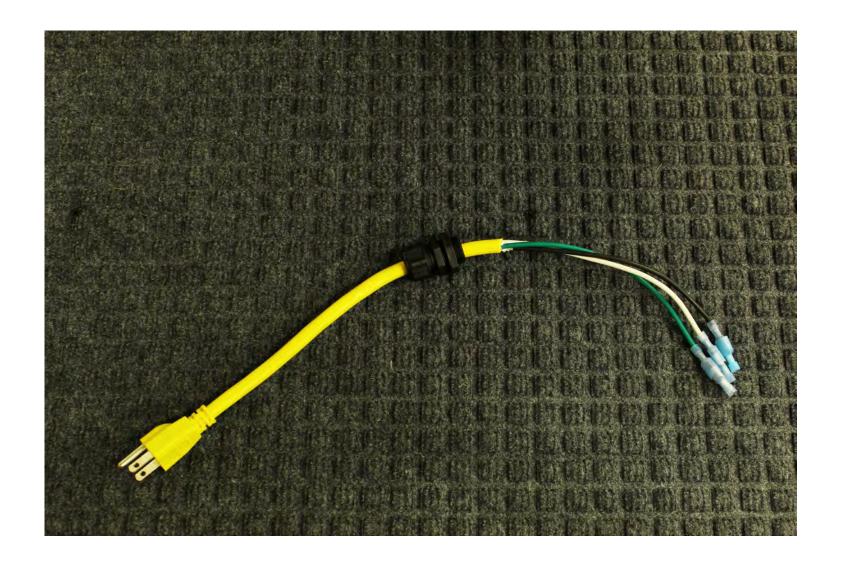


1. Connect the white and green wires from the Pigtail to the machines wire harness, as shown in the picture

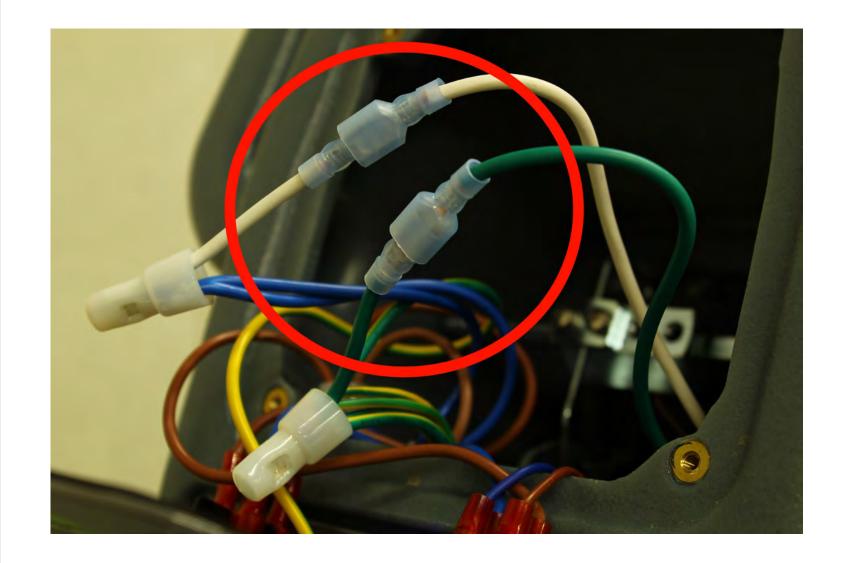


1. Plug the black wire back into the circuit breaker, as shown in the picture

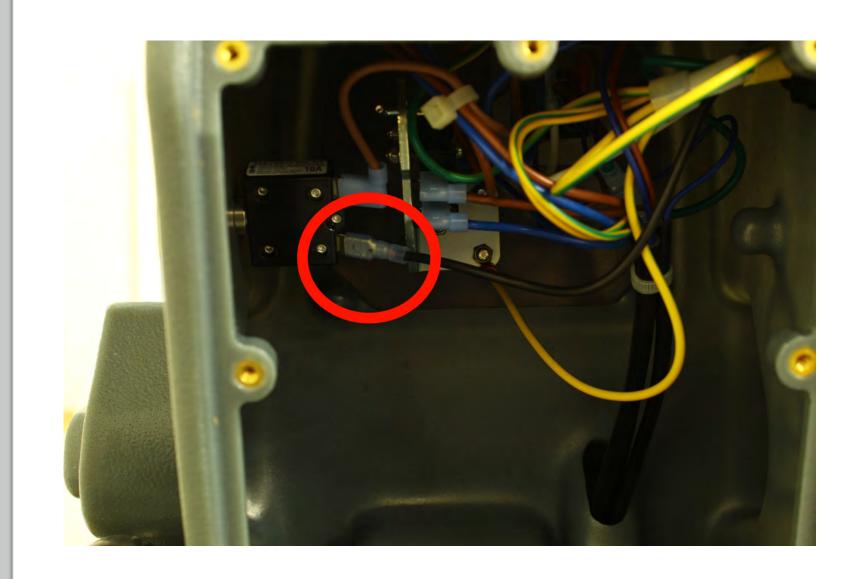

1. Install the 7 Philips head screws on the back panel.

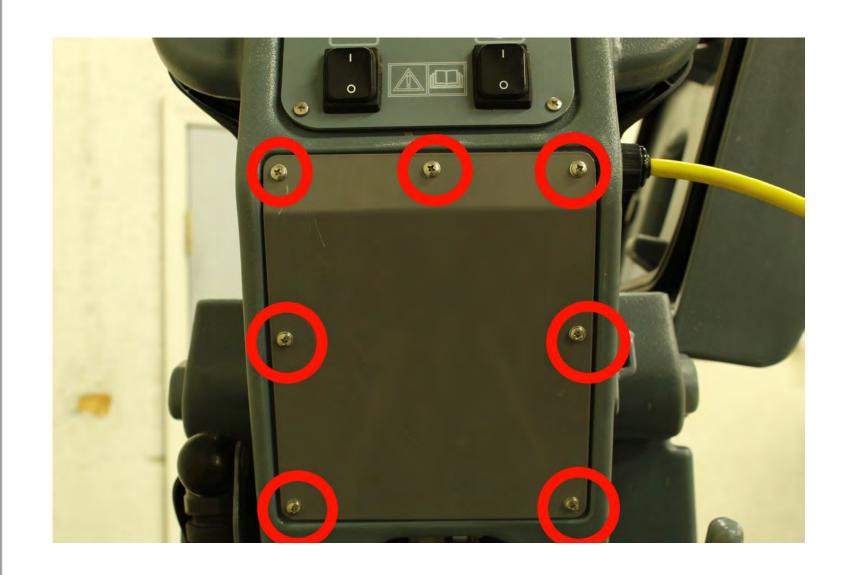

1. Install the 4 Philips head screws on the control panel.

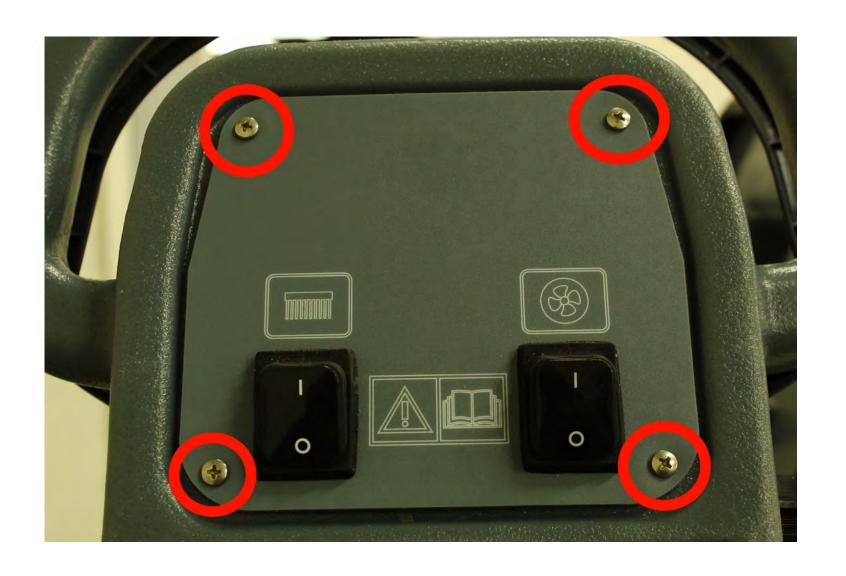

ALL DONE!

