


**Detail Scraper Tool**

Can be used to remove food stuck on cooking surfaces, removing wallpaper, defrosting freezers, etc.

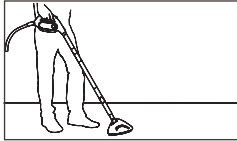

**Large Triangle Brush**

Designed to clean corners and other difficult angles. Use on textured floors, tile, etc.



**Large Triangle Brush w Cloth**

Can be used to clean and disinfect upholstery, drapery, bedding, pet beds etc.

It is recommended that you test the attachment in an inconspicuous area prior to completing a detailed cleaning regimen.

**Troubleshooting**

Problem	Possible Cause	Solution
Brio Plus 410CC fails to emit any steam	Unit is not plugged in	Plug unit into a working electrical outlet
	Water tank is empty	Fill water tank
	The childproof lock is on	Push the black pin on the right hand side of the steam gun to the left

Problem	Possible Cause	Solution
Brio Plus 410CC is emitting excess water	Water condensation in steam hose	Direct steam nozzle to a sink or tub and hold down steam button. Continue until excess steam is released
	Water tank is overfilled	Empty some water out of the boiler's water tank
	Unit has not reached operating temperature	Empty some water out of the boiler's water tank
Only a small amount of steam flows	Steam controller is set to a minimum	Turn the steam dial to a higher setting
My accessories do not fit properly	O-Rings on flexible steam hose/short angle extension wand are missing/damaged	Check to see that the red rings (O-Rings) at the tip of the flexible steam hose/ short angle extension wand are intact. If they are missing/damaged, get in touch with Reliable Corporation for repair/replacement


For more information on your product, to view instructional videos or to download the full user manual, visit [reliablecorporation.com](https://reliablecorporation.com)



**Having trouble? Call us.**  
For service and/or technical assistance on this product, call our toll free number or email our support staff.

**1-800-268-1649**  
**[support@reliablecorporation.com](mailto:support@reliablecorporation.com)**

**Quick Start Guide**

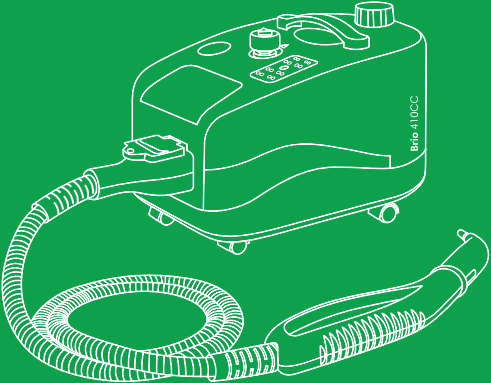

**410CC**  
**Brio Plus Steam Cleaner**

Control Panel

Symbols	Description
	The unit has been turned on/power has been connected
	The device is heating up
	The device is pumping water into the unit
	Your unit is ready for use
	Lowest steam output setting
	Maximum steam output setting
	Low water level, refill tank
	Warning: Temperature inside the unit is too high. Unplug and wait for it to cool.

Getting Started

- 1

Untwist the cap by turning counter clockwise. Fill your Brio Plus 410CC with water (max 1.2 L) using your measuring cup and funnel. When filled, twist cap and tighten lid shut.
- Note to preserve the life of your unit, fill using tap water. Do not use distilled water.
- 2

Lift flap located at the front of your unit and plug in flexible steam hose. Fit pin into place to avoid accidentally unplugging steam hose.
- 3

Connect desired accessory to flexible steam hose as shown in assembly section.
- 4

Connect the power cord to a working electrical outlet.

- 5

Flip power switch (1) to on position then press activation button (2).

Note as your unit begins to preheat, you will hear light buzzing noise. This is normal. It is simply water pumping into your steam cleaning unit.
- 6

Hold your Brio Plus 410CC 1" away from the surface you wish to clean and press steam trigger. Move Brio back and forth slowly over the area.
- 7

Toggle the button on the side of the flexible steam hose to increase/ decrease your level of steam. Steam output setting on control panel will change accordingly.

High steam output      Low steam output

- 8

If you require refilling your water tank during your cleaning regimen, you do not have to turn off your unit/wait for it to cool. Simply repeat step 1.
- 9

Once you have completed your cleaning regimen, turn the power off and release steam pressure.

Note Release pressure by holding down the steam trigger until there is no more steam.
- 10

Unplug your unit from electrical outlet.
- 11

Remove all accessories/attachments from your unit. Use carrying case for convenient storage.
- 12

Once the unit has cooled completely, empty your boiler tank of any residual water.
- 13

Store your Brio Plus 410CC in a cool, dry location.

Assembly

Based on your cleaning needs, insert the appropriate attachment onto flexible steam hose or flexible steam hose with extension wands.

- Attach either one or both of the extension wands onto the flexible steam hose by clicking into place.
- Attach either one or both of the extension wands onto the flexible steam hose by clicking into place.
- Attach small round brushes (nylon or brass) onto high pressure steam nozzle by pressing firmly into place.
- Insert high pressure steam nozzle with a threaded brass tip onto the flexible steam hose and twist into place.
- Attach detail scraper tool to flexible steam hose. Fit into place.
- Attach detail scraper tool to flexible steam hose. Fit into place.
- Attach short angle extension rod to flexible steam hose by clicking into place. Once fitted, attach either floor brush or big triangle shaped nylon brush and twist into place.
- Attach short angle extension rod to flexible steam hose by clicking into place. Once fitted, attach either floor brush or big triangle shaped nylon brush and twist into place.
- Place the microfiber cloth underneath the rectangle scrub brush. Lift flaps on scrub brush by pressing down. Close flaps and secure microfiber cloth in place.
- Place the microfiber cloth underneath the rectangle scrub brush. Lift flaps on scrub brush by pressing down. Close flaps and secure microfiber cloth in place.
- Attach small triangle brush to flexible steam hose. Fit into place.
- Attach small triangle brush to flexible steam hose. Fit into place.
- To remove any of the above attachments, press down on the button located at the top of the steam hose and pull apart accessory.

Accessories & Attachments

- High Pressure Steam Nozzle with Brass Tip**  
Suitable for most cleaning purposes. Works well when cleaning hard to reach areas. Uses include cleaning microwaves, removing scum in bathrooms, car interiors, etc.
- Small Nylon Round Brush**  
Ideal for cleaning hard to reach, otherwise inaccessible areas. Use on any surfaces that require a light scrubbing action such as sinks, marble, grout, etc.
- Floor Brush**  
Used to clean floors, walls and carpets. Ideal for tile, stone, vinyl, wood floors and other hard surfaces.
- Floor Brush with Cloth**  
Can be used to absorb dirt and protect delicate surfaces. Can also be used to clean and disinfect carpets.
- Small Brass Round Brush**  
For tougher cleaning jobs. Use only on metal safe surfaces such as BBQs, wire racks, etc.
- Window Wiper**  
Can be used to clean windows, mirrors and shower doors and other glass surfaces.